User Manual

TELE System Navigation

Navigation software for TS8511

UK English

May 2009, ver. 1.0

Thank you for choosing our product as your in-car navigator. Read the Quick Start Guide first and start using your device right away. This document is the detailed description of the navigation software. You can easily discover your device while you are using it; however, we still recommend that you read this manual to fully understand the screens and the features of your software.

Table of contents

1 Warnings and Safety information 5

2 Getting started 6

2.1 Startup screen: the Navigation menu 8

2.2 Buttons and other controls on the screen 8

2.2.1 Using keyboards 9

2.2.2 Beyond single screen tap 10

2.3 Map screen 11

2.3.1 Navigating on the map 11

2.3.2 Position markers 13

2.3.2.1 Vehimarker and Lock-on-Road 13

2.3.2.2 Selected location (Cursor) in Find on Map 13

2.3.3 Objects on the map 13

2.3.3.1 Streets and roads 13

2.3.3.2 Turn Preview and next street 13

2.3.3.3 Lane information and Signposts 15

2.3.3.4 3D object types 15

2.3.3.5 Elements of the active route 15

2.3.3.6 Traffic events 16

2.3.4 Manipulating the map 17

2.3.5 Quick menu 18

2.3.6 Checking the details of the current position (Where Am I?) 20

3 Navigating 22

3.1 Selecting the destination of a route 22

3.1.1 Entering an address or part of an address 22

3.1.1.1 Entering an address 22

3.1.1.2 Entering the midpoint of a street as the destination 25

3.1.1.3 Selecting an intersection as the destination 27

3.1.1.4 Selecting a city/town centre as the destination 29

3.1.1.5 Entering an address with a postal code 30

3.1.1.6 Tips on entering addresses quickly 32

3.1.2 Selecting the destination from the Places of Interest 32

3.1.2.1 Selecting the destination from the Places of Interest with Quick search 33

3.1.2.2 Selecting the destination from other Places of Interest by name 35

3.1.2.3 Selecting the destination from other Places of Interest by category 37

3.1.2.4 Selecting nearby assistance from 'Where Am I?' 40

3.1.3 Selecting a map location as the destination 42

3.1.4 Selecting the destination from your Favourites 43

3.1.5 Selecting the most likely destination (Smart History) 43

3.1.6 Selecting the destination from the History 44

3.2 Viewing the entire route on the map 45

3.3 Checking the route parameters *45*
3.4 Modifying the route *47*
3.4.1 Replacing the destination of the route 47
3.4.2 Setting a new starting position for the route 47
3.4.3 Pausing the active route 48
3.4.4 Deleting the active route 48
3.4.5 Changing the route planning method 49
3.4.6 Checking the route alternatives 50
3.4.7 Changing the vehicle used in route planning 51
3.4.8 Changing the road types used in route planning 52
3.5 Adding the destination of the route to Favourites *54*
3.6 Watching the simulation of the route *54*
4 Reference Guide 56
4.1 Concepts *56*
4.1.1 Smart Zoom 56
4.1.2 Daytime and night colour themes 56
4.1.3 Colour theme in tunnels 56
4.1.4 Route calculation and recalculation 56
4.1.5 Road Safety Cameras 57
4.1.5.1 Camera types *58*
4.1.5.2 Camera directions *58*
4.1.6 Speed limit warning 59
4.1.7 Battery and GPS position quality indicators 59
4.1.8 Traffic - TMC (Traffic Message Channel) 60
4.2 'More' menu *61*
4.3 Settings menu *61*
4.3.1 Route settings 62
4.3.2 Sound settings 64
4.3.3 3D vehicle gallery 65
4.3.4 Colour themes 65
4.3.5 Set starting position 66
4.3.6 Regional settings 66
4.3.7 Content 67
5 Product activation 68
6 Glossary 70
7 End User Licence Agreement 72
8 Copyright note 72

1 Warnings and Safety information

This software is a navigation system that helps you find your way to your destination with the built-in GPS receiver. The software does not transmit your GPS position; others cannot track you.

It is important that you look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you operate your software before you start your journey. Plan the route before your departure and stop if you need to change the route.

You must obey the traffic signs and follow the road geometry. If you deviate from the recommended route, your software changes the instructions accordingly.

Never place your device where it obstructs the driver's view, where it is in the deployment zone of an airbag or where it might cause injuries in an accident.

For more information, consult the End User Licence Agreement (page 72).

2 Getting started

The software is optimised for in-car or pedestrian use. There is no need to use a stylus. You can use it easily by tapping the screen buttons and the map with your fingertips.

When using the navigation software for the first time, an initial setup process starts automatically. Do as follows:

1. Select the written language of the application interface. Later you can change it in Regional settings (page 66).

2. Read and accept the End User Licence Agreement.

EULA
End User Licence Agreement
1 The contracting parties
1.1 This Agreement has been entered into by and between Nav N Go Kft. (registered seat: 23 Bérc utca, H-1016 Budapest, Hungary; Company reg.no.: 01-09-891838) as Licensor (hereinafter: Licensor) and You as the User (hereinafter: User; the User and the Licensor jointly referred to as: Parties) in subject of the use of the software product specified in this Agreement.
2 Conclusion of the Agreement
2.1 The Parties hereby acknowledge that this Agreement shall be concluded by implicit conduct of the Parties without signing the Agreement.
2.2 The User hereby acknowledges that following the lawful acquisition of the software product constituting the object of this Agreement (Section 4), any
Decline
Accept

3. The Configuration wizard starts in the selected language. Tap

to continue.

4. Select the language and speaker used for voice guidance messages. Later you can change it in Regional settings (page 66).

5. If needed, modify the time format, time zone and unit settings. Later you can change them in Regional settings (page 66).

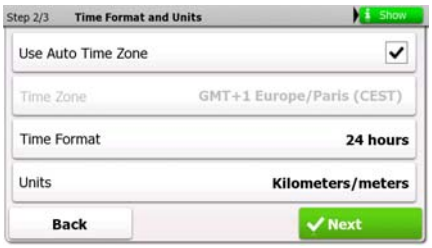

6. If needed, modify the default route planning options. Later you can change them in Route settings (page 62).

7. The initial setup is now complete. Tap Finish to proceed. The Configuration wizard can be restarted later from the Settings menu (page 61).
8. You are offered to watch the Tutorial that leads you through the basic steps of navigation, or to run Demo route simulations. To start using the software right away, you can tap No to skip the tutorial as you can run it later from the 'More' menu (page 61).

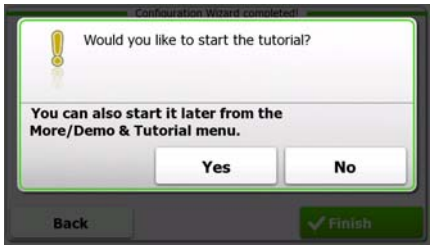

9. Your navigation software may not be activated yet. You are reminded to perform this task. You may activate it immediately by tapping Activate Now, or you can do so at a later date. In order to activate this product, you need an active Internet connection on your PC or mobile phone.

Activation Reminder
Please activate your product. If you activate your product successfully then you can be 100% sure that your product is genuine.
www.naviextras.com/to/activate
Back
Activate Now

After the initial setup, the Navigation menu appears and you can start using the software. This is the screen you see every time navigation starts.

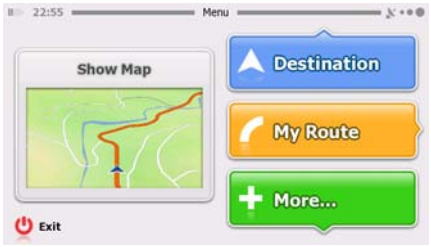

The typical way of using the software is to select a destination, and start navigating. You can select your destination in the following ways:

- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 22).
- Enter an address with postal code (page 30). This way you do not need to select the name of the settlement and the search for street names might be faster as well.

- Use a built-in Place of Interest as your destination (page 32).
- Select a location on the map with the Find on Map feature (page 42).
- Use a previously saved Favourite destination (page 43).
- Select a location from the History of previously used destinations (page 44).

2.1 Startup screen: the Navigation menu

The software starts with its main menu, the Navigation menu. From here you can reach all parts of the software.

You have the following options:

- Tap

to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favourite destinations. You can also look up your recent destinations from the Smart History.
- Tap

to display the route parameters and the route in its full length on the map. You can also perform route-related actions such as cancelling your route, picking route alternatives, simulating navigation or adding the destination to your Favourites. (This button remains inactive if there is no destination given.)
- Tap

to customise the way the navigation software works, watch the Demo & Tutorial, run some additional applications, or to get extra content from www.telesystem.it.
- Tap

to start navigating on the map. The button itself is a miniature live map that shows your current position, the recommended route and the surrounding map area. Tap the button to enlarge the map to the full screen.

2.2 Buttons and other controls on the screen

When you are using the software, you usually tap buttons on the touch screen.

You only need to confirm selections or changes if the application needs to restart, it needs to perform a major reconfiguration, or you are about to lose some of your data or settings. Otherwise, the software saves your selections and applies the new settings without confirmation as soon as you use the controls.

Type	Example	Description	How to use it
Button		Tap it to initiate a function, to open a new screen, or to set a parameter.	Tap it once.
Button with value		Some buttons display the current value of a field or setting. Tap the button to change the value. After the change, the new value is shown on the button.	Tap it once.
Icon		Shows status information.	Some icons also function as a button. Tap them once.
List		When you need to select from several options, they appear in a list.	Move between pages with the and buttons and tap the value that you want. Alternatively, grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end.
Slider		When a feature can be set to different values in a range, the software shows an indicator on a gauge that displays and sets the value.	• Drag the handle to move the slider to its new position. • Tap the slider where you want the handle to appear; the thumb jumps there.
Switch		When there are only two choices, a checkmark shows whether the feature is enabled.	Tap it to turn the switch on or off.
Virtual keyboard		Alphabetic and alphanumeric keyboards to enter text and numbers.	Each key is a touch screen button.

2.2.1 Using keyboards

You only need to enter letters or numbers when you cannot avoid it. You can type with your fingertips on the full-screen keyboards and you can switch between various keyboard layouts, for example English, Greek or numerical.

Task	Details
Switching to another keyboard layout, for example from an English keyboard to a Greek keyboard	This cannot be done when you are already using the virtual keyboard. You can do it in Regional settings (page 66).
Correcting your entry on the keyboard	Tap to remove the unneeded character(s). Tap and hold the button to delete several characters or the entire input string.
Entering a space, for example between a first name and a family name or in multi-word street names	Tap the empty button at the bottom centre of the screen.
Entering numbers and symbols	Tap to switch to a keyboard offering numeric and symbol characters.
Finalising the keyboard entry (accepting the suggested search result)	Tap .
Finalising the keyboard entry (opening the list of search results)	Tap  .
Finalising the keyboard entry (saving your input)	Tap .
Cancelling the keyboard entry (returning to the previous screen)	Tap  .

2.2.2 Beyond single screen tap

You usually need to tap the screen only once. However, some useful features can be accessed with combined touch screen tapping. Those are the following:

Tasks	Instructions
Tapping and holding the screen	Tap and keep pressing the following buttons to reach extra functions: • Tap and hold on list and menu screens: the Map screen appears. • Tap and hold any of the ,  , and buttons on the Map screen: you can rotate, tilt or scale the map continuously. • Tap and hold on keyboard screens: you can delete several characters quickly. • Tap and hold  in long lists: you can scroll pages

Tasks	Instructions
	continuously.
Gestures (drag&drop)	You need to drag and drop the screen only in cases like: • Moving the handle on a slider. • Scrolling the list: grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end. • Moving the map in map browsing mode: grab the map, and move it in the desired direction. • Shortcut to open the Map screen: slide your finger from the bottom right corner to the bottom left corner on any screen. • Shortcut to open the Navigation menu: slide your finger from the top left corner to the bottom left corner on any screen.

2.3 Map screen

2.3.1 Navigating on the map

The Map screen is the most frequently used screen of the software. A small live map is displayed on the startup screen, the Navigation menu, as a part of the Show Map button.

To enlarge this small map and open the Map screen, tap Show Map.

The map is displayed in black and white when there is no GPS position:

... or in full colour when the current position is available:

This map shows the current position (the Vehimarker, a blue arrow by default), the recommended route (an orange line), and the surrounding map area.

There are screen buttons and data fields on the screen to help you navigate. During navigation, the screen shows route information.

Tap the bottom left corner to see all three route data fields.

Tap any of the data fields to suppress others and display only the selected one. The data fields are different when you are navigating an active route and when you have no specified destination (the orange line is not displayed).

Data fields when cruising without a destination:

Field	Description
Speed 61 km/h	Shows your current speed given by the GPS receiver.
Speed limit 70 km/h	Shows the speed limit of the current road if the map contains it.
Time 17:11	Shows the current time corrected with time zone offset. The accurate time comes from the GPS satellites, and the time zone information comes from the map or it can be set manually in Regional settings. (The current time is always displayed in the top left corner of the high level menu screens.)

Data fields when navigating a route:

Field	Description
Distance 16.9 km	Shows the distance you need to travel on the route before reaching your final destination.
Time left 0:16	Shows the time needed to reach the final destination of the route based on information available for the remaining segments of the route. If a TMC reveiver is connected to your device, the calculation takes into account traffic delays affecting your route if they are received through the TMC system. However, this calculation is rarely accurate.
Arrival Time 17:22	Shows the estimated arrival time at the final destination of the route based on information available for the remaining segments of the route. If a TMC reveiver is connected to your device, the calculation takes into account

Field	Description
	traffic delays affecting your route if they are received through the TMC system. However, this calculation is rarely accurate.

2.3.2 Position markers

2.3.2.1 Vehimarker and Lock-on-Road

When your GPS position is available, the software marks your current position with the Vehimarker. By default, this marker is a blue arrow, but you can change this icon in Settings.

The exact location of the Vehimarker depends on the vehicle type used for route calculation. The vehicle type can be selected in Route settings (page 62).

- If you choose pedestrian: The Vehimarker is at your exact GPS position. The direction of the icon shows your current heading.
- If you choose any of the vehicles: The Vehimarker may not show your exact GPS position and heading. If roads are near, it is aligned to the nearest road to suppress GPS position errors, and the direction of the icon is aligned to the direction of the road.

2.3.2.2 Selected location (Cursor) in Find on Map

If you select a location on the map in Find on Map (page 42), the Cursor appears at the selected point on the map. The Cursor is displayed with a radiating red dot ( ) to make it visible at all zoom levels.

The location of the Cursor can be used as the destination of the route.

2.3.3 Objects on the map

2.3.3.1 Streets and roads

The software shows the streets in a way that is similar to how the paper road maps show them. Their width and colours correspond to their importance: you can easily tell a motorway from a small street.

2.3.3.2 Turn Preview and next street

When navigating a route, the top section of the Map screen shows information about the next route event (manoeuvre) and the next street or the next city/town.

There is a field in the top left corner that displays the next manoeuvre. Both the type of the event (turn, roundabout, exiting motorway, etc.) and its distance from the current position is displayed.

A smaller icon shows the type of the second next manoeuvre if it is near the first one. Otherwise, only the next manoeuvre is displayed.

Most of these icons are very intuitive. The following table lists some of the frequently shown route events. The same symbols are used in both fields:

Icon	Description
	Turn left.
	Turn right.
	Turn back.
	Bear right.
	Turn sharp left.
	Keep left.
	Continue straight in the intersection.
	Enter roundabout. The layout of the roundabout and the number of the exit is shown only for the next turn.
	Enter motorway.
	Exit motorway.
	Board ferry.
	Leave ferry.
	Approaching the destination.

2.3.3.3 Lane information and Signposts

When navigating on multilane roads, it is important to take the appropriate lane in order to follow the recommended route. If lane information is available in the map data, the software displays the lanes and their directions using small arrows at the bottom of the map. Highlighted arrows represent the lanes you need to take.

Where there is additional information available, signposts substitute arrows. Signposts are displayed at the top of the map. The colour and style of the signposts are similar to the real ones you can see above road or by the roadside. They show the available destinations and the number of the road the lane leads to.

All signposts look similar when cruising (when there is no recommended route). When navigating a route, only that signpost is displayed in vivid colours that points to the lane(s) to be taken; all others are darker.

2.3.3.4 3D object types

your software supports the following 3D object types:

Type	Description
3D terrain	3D terrain map data shows changes in terrain, elevations or depressions in the land when you view the map in 2D, and use it to plot the route map in 3D when you navigate. Hills and mountains are shown in the background of the 3D map, and illustrated by colour and shading on the 2D map.
Elevated roads	Complex intersections and vertically isolated roads (such as overpasses or bridges) are displayed in 3D.
3D landmarks	Landmarks are 3D artistic or block representations of prominent or well-known objects. 3D landmarks may not be part of the original software or they may need additional activation. They are only available in selected cities and countries. Check telesystem.naviextras.com for details.
3D buildings	Block representation of full 3D city building data containing actual building size and position on the map. Building data is not part of the original software, and it is limited to the city centres of major cities in the US and Europe. Check telesystem.naviextras.com for details.

2.3.3.5 Elements of the active route

your software shows the route in the following way:

Symbol	Name	Description
	Current GPS position and Start point	Your current position displayed on the map. • In pedestrian mode it is the exact GPS

Symbol	Name	Description
		position. • If a vehicle is selected for route calculation and roads are near, the symbol is snapped onto the nearest road. Normally if GPS position is available, the route starts from the current position. If there is no valid GPS position, your software uses the last known position as the start point.
	Destination (end point)	The last point of the route.
	Map colour	The map is vivid and colourful when GPS position is available. Whenever the current position is not available, the map turns grey. The software however may still move the Vehimarker to show a possible but not confirmed position.
	Route colour	The route always stands out with its colour on the map, both in daytime and in night colour mode.
	Streets and roads that are excluded from the navigation	You can choose whether you want to use or avoid certain road types (page 62). However, when your software cannot avoid such roads, the route will include them and it will show them in a colour that is different from the route colour.
	Streets and roads that are affected by traffic events	Road segments may be affected by traffic events received. These streets and roads are displayed in an alternate colour, and small symbols displayed along the route show the type of the traffic event.

2.3.3.6 Traffic events

Road segments affected by traffic events are displayed with an alternate colour on the map, and small symbols above the road show the nature of the event:

To see the list of received Traffic events, tap TMC:

Now tap any of the list items to see its details, and to display the affected road segment in its full length on the map:

2.3.4 Manipulating the map

To browse the map during navigation, tap . The map stops following the current position (the Vehimarker, a blue arrow by default, is not locked in a fix position on the screen any more) and control buttons appear to help you modify the map view.

Action	Button(s)	Description
Moving the map with drag&drop	No buttons	You can move the map in any direction: tap and hold the map, and move your finger towards the direction you want to move the map.
Zooming in and out	,	Changes how much of the map is displayed on the screen. your software uses high-quality vector maps that let you examine the map at various zoom levels, always with optimised content. It always displays street names and other text with the same font size, never upside-down, and you only see the streets and objects that you need. Map scaling has a limit in 3D map view mode. If you zoom out further, the map switches to 2D view mode. Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.
Tilting up and down	,	Changes the vertical view angle of the map in 3D mode. Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.

Action	Button(s)	Description
Rotating left and right		Changes the horizontal view angle of the map. Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.
Compass in 2D map view mode		The direction of the compass shows North. Tap the button to switch to North-up view, then tap again to rotate the map in the previous direction.
Compass in 3D map view mode		The direction of the compass shows North. Tap the button to switch to North-up view, then tap again to rotate the map in the previous direction.
Return to normal navigation		Tap this button to move the map back to the current GPS position. If the map has been rotated, automatic map rotation is also re-enabled.

2.3.5 Quick menu

The Quick menu is a selection of controls that are frequently needed during navigation. It can be opened directly from the Map screen by tapping the map.

Buttons in the top row: These buttons are switches. Their current value is displayed on the button. Tap any of the buttons to see all values.

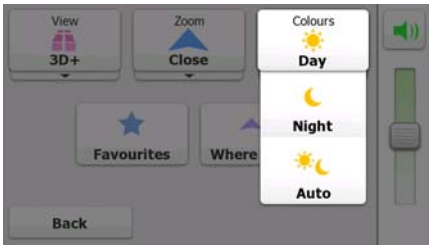

Now tap any of the values and your selection takes immediate effect. The Map screen returns automatically.

Buttons in the middle row: These buttons open new screens. Work on those screens, and when you get back here, tap Back to return to the Map screen or tap and hold Back on any screen to return to the Map screen directly.

The buttons and their values on this screen are the following:

Button	Function
Back	If you do not use the switches in the top row, you need to use this button to return to the Map screen.
Master Volume slider	Adjusts the sound volume of the device. All sounds of the application are affected.
	Use the switch to mute all sounds of the device and then to re-enable them again.
	The map can be displayed in a perspective view (3D) or in a top-down view (2D), and in 3D mode buildings can be displayed on the map. Selectable values: : The map is displayed in 3D (perspective) view. If 3D building data is downloaded and activated in the software, buildings are visible on the map. : The map is displayed in 3D (perspective) view. Buildings are suppressed. : The map is displayed in 2D (top-down) view.
	The zoom level of the map can be set. Smart Zoom continuously zooms the map in and out. This is a reference to the average zoom level. Selectable values: : The default zoom level. Smart Zoom modifies the zoom and tilt levels to an optimal view for the current route situation. : The zoom level is higher than the normal. All map elements are displayed in large, a part of the surrounding area is not visible. : The zoom level is lower than the normal. Map elemens become smaller, but more of the surrounding area is shown.
	Switches between the daytime and night colour themes. Selectable values: : The map and the menu screens are displayed in daytime colours. : The map and the menu screens are displayed in night colours.

Button	Function
	: This enables your software to switch automatically between the daytime and the night colour themes based on the current time and GPS position a few minutes before sunrise, when the sky has already turned bright, and a few minutes after sunset, before it becomes dark.
	This button opens the list of Favourite destinations to select a new route destination. This list can also be accessed from the Destination menu.
	This button opens a special screen with information about the current position and a button to search for nearby emergency or roadside assistance. For details, see the next chapter.

2.3.6 Checking the details of the current position (Where Am I?)

Opened from the Quick menu, this screen contains information about the current position (or about the last known position if GPS reception is not available) and a button to search for useful Places nearby.

Information on this screen:

- : Latitude and Longitude (coordinates of the current position in WGS84 format).
- : Altitude (elevation information coming from the GPS receiver - often inaccurate).
- : Address details (when available) of the current position.
- : House number on the left.
- : House number on the right.
- : Shows whether the position is current, or the time left since it was last updated.

Besides these pieces of information, you can search for assistance near your current position.

Tap  to open a new screen for the Quick search:

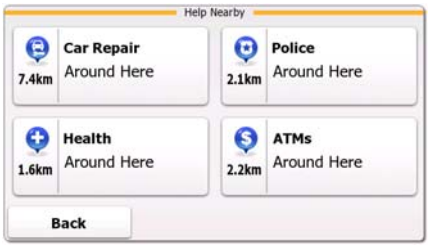

The following services can be searched around the current position or the last known position:

-

: Car repair and roadside assistance services
-

: Medical and emergency services
-

: Police stations
- 

: Cash dispensers

Tap any of the buttons, select a Place from the list, and navigate to it.

3 Navigating

You can set up your route in different ways:

- If you need a route for immediate navigation, you can select the destination and start navigating to it right away (normal navigation).
- You can also plan a route independently of your current GPS position or even without GPS reception (to achieve this, you need to turn off the GPS receiver and set a new starting point in the Settings menu - see page 47).

3.1 Selecting the destination of a route

The software offers you several ways of choosing your destination:

- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 22).
- Enter an address with postal code (page 30). This way you do not need to select the name of the settlement and the search for street names might be faster as well.
- Use a built-in Place of Interest as your destination (page 32).
- Select a location on the map with the Find on Map feature (page 42).
- Use a previously saved Favourite destination (page 43).
- Select a location from the History of previously used destinations (page 44).

3.1.1 Entering an address or part of an address

If you know at least a part of the address, it is the quickest way to select the destination of the route.

Using the same screen, you can find an address by entering:

- the exact address, including house number
- the centre of a city/town
- an intersection
- the midpoint of a street
- any of the above, starting the search with the postal code (page 30)

3.1.1.1 Entering an address

To enter an address as the destination, do as follows:

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. By default, the software proposes the country and settlement where you are. If needed, tap the button with the name of the country, enter the first few letters of the country name on the keyboard, and select one country from the list of results.

4. If needed, select a new city/town:
    1. Tap the button with the name of the city/town, or if you have changed the country/state, tap **<City Name>**.
    2. Start entering the name of the city/town on the keyboard.
    3. Find the city/town you need:
        - The most likely city/town name is always shown in the input field. To accept it, tap .
        - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap). Select the city/town from the list.

-

5. Enter the street name:
    1. Tap **<Street Name>**.
    2. Start entering the street name on the keyboard.
    3. Find the street you need:
        - The most likely street name is always shown in the input field. To accept it, tap .
        - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap). Select the street from the list.

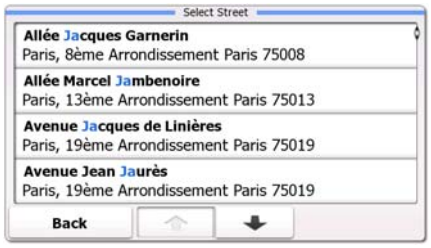

6. Enter the house number:

   1. Tap **<House Number>** .
   2. Enter the house number on the keyboard. (To enter letters, tap **Alt**).
   3. Tap **Done** to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)

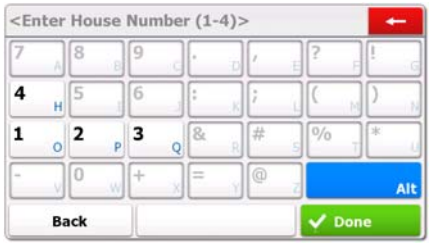

7. (optional) There are long roads where house numbering is restarted at some point. This way the same house number can appear twice or even more times on the same road. If this is the case, a list appears after entering the house number. You need to select the appropriate address by the district/suburb information.

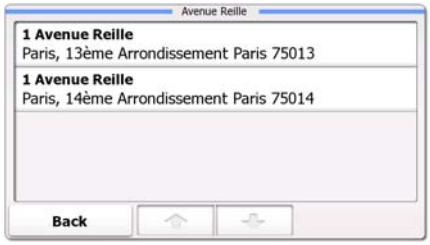

8. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap **More Options** or **Route Settings** to modify route parameters, or tap **Go!** and start your journey.

Tip! If you know that you will use this destination frequently, before tapping

, put the destination on the list of your Favourites first: tap

and then

, and save the location. The map with the destination returns automatically. Now you can start your journey.

3.1.1.2 Entering the midpoint of a street as the destination

You can navigate to the midpoint of a street if the house number is not available:

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. By default, the software proposes the country and settlement where you are. If needed, tap the button with the name of the country, enter the first few letters of the country name on the keyboard, and select one country from the list of results.

4. If needed, select a new city/town:
   1. Tap the button with the name of the city/town, or if you have changed the country/state, tap

.
   2. Start entering the name of the city/town on the keyboard.
   3. Find the city/town you need:
      - The most likely city/town name is always shown in the input field. To accept it, tap
.
      - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap

). Select the city/town from the list.

-

5. Enter the street name:

   1. Tap <Street Name>.
   2. Start entering the street name on the keyboard.
   3. Find the street you need:
      - The most likely street name is always shown in the input field. To accept it, tap .
      - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap List). Select the street from the list.

-
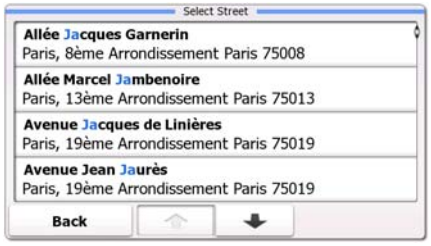

6. Instead of entering the house number, tap Select Street. The midpoint of the street is selected as the destination.

7. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap More Options or Route Settings to modify route parameters, or tap Go! and start your journey.

-

3.1.1.3 Selecting an intersection as the destination

To enter an address as the destination, do as follows:

1. If you are on the Map screen, tap Menu to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons: Destination, Find Address.
3. By default, the software proposes the country and settlement where you are. If needed, tap the button with the name of the country, enter the first few letters of the country name on the keyboard, and select one country from the list of results.

4. If needed, select a new city/town:
    1. Tap the button with the name of the city/town, or if you have changed the country/state, tap <City Name>.
    2. Start entering the name of the city/town on the keyboard.
    3. Find the city/town you need:
        - The most likely city/town name is always shown in the input field. To accept it, tap .
        - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap List). Select the city/town from the list.

-

5. Enter the street name:
    1. Tap <Street Name>.
    2. Start entering the street name on the keyboard.

3. Find the street you need:
   - The most likely street name is always shown in the input field. To accept it, tap .
   - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap). Select the street from the list.

-
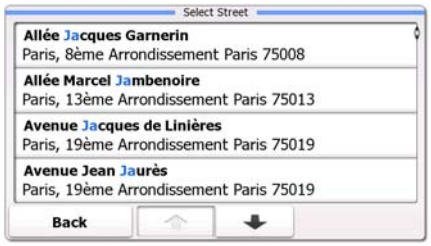

6. Enter the intersecting street name:
   1. Tap .
      - If only a few intersecting streets exist, their list appears immediately.
      - In case of a longer street, a keyboard screen appears. Start entering the name of the intersecting street on the keyboard. As soon as the street names that match the entered string can be shown on one screen, their list appears automatically. Select from the list.

-
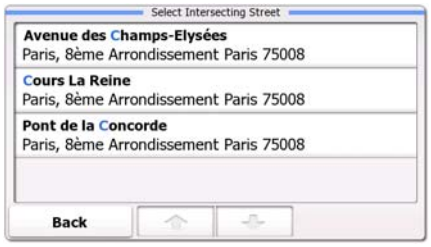

7. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap or to modify route parameters, or tap and start your journey.

-

3.1.1.4 Selecting a city/town centre as the destination

The city/town centre is not the geometric centre of the settlement but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. By default, the software proposes the country and settlement where you are. If needed, tap the button with the name of the country, enter the first few letters of the country name on the keyboard, and select one country from the list of results.

4. If needed, select a new city/town:
    1. Tap the button with the name of the city/town, or if you have changed the country/state, tap

.
    2. Start entering the name of the city/town on the keyboard.
    3. Find the city/town you need:
        - The most likely city/town name is always shown in the input field. To accept it, tap
.
        - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap

). Select the city/town from the list.

-

5. Instead of entering the street name, tap

. This way the centre of the displayed city/town becomes the destination of the route.

6. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.1.5 Entering an address with a postal code

All of the above address searching possibilities can be performed with entering the postal code instead of the settlement name. Find below an example with a full address:

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. By default, the software proposes the country and settlement where you are. If needed, tap the button with the name of the country, enter the first few letters of the country name on the keyboard, and select one country from the list of results.

4. Enter a new city/town using its postal code:
    1. Tap the button with the name of the city/town, or if you have changed the country/state, tap

.
    2. Tap

to open the numeric keypad.
    3. Start entering the postal code.

4. Find the city/town you need:
   - The most likely postal code is always shown in the input field. To accept it, tap .
   - If the desired number does not show up, open the list of results by tapping . Select the postal code from the list.

-

5. Enter the street name:

1. Tap <Street Name>.
2. Start entering the street name on the keyboard.
3. Find the street you need:
   - The most likely street name is always shown in the input field. To accept it, tap .
   - If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap). Select the street from the list.

-
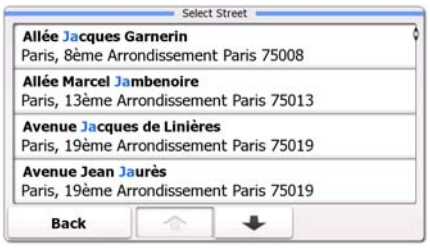

6. Enter the house number:

1. Tap <House Number>.
2. Enter the house number on the keyboard. (To enter letters, tap).
3. Tap to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)

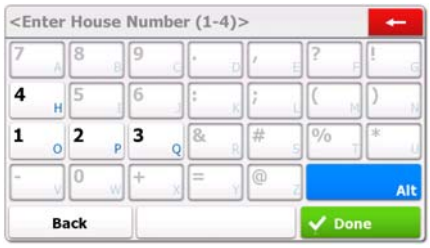

7. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.1.6 Tips on entering addresses quickly

- When you are entering the name of a city/town or a street:
  - Only those letters are offered on the keyboard that appear in possible search results. All other characters are greyed out.
  - As you are typing, the most likely result is always displayed in the input field. If the guess is correct, tap to select it.
  - After entering a couple of letters, tap

to list the items that contain the specified letters.
- You can speed up finding an intersection:
  - Search first for the street with a less common or less usual name; fewer letters are enough to find it.
  - If one of the streets is shorter, search for that one first. You can then find the second one faster.
- You can search for both the type and the name of a road. If the same word appears in several names, for example in the name of streets, roads and avenues, you can obtain the result faster if you enter the first letter of the street type: For example, enter 'PI A' to obtain Pine Avenue and skip all Pine Streets and Pickwick Roads.
- You can also search in postal codes. This is useful when a street name is common and it is used in several districts of a city.

3.1.2 Selecting the destination from the Places of Interest

You can select your destination from the Places of Interest included with your software.

Using the same screen, you can find a Place in different ways:

- with the Quick search feature, you can find frequently searched types of Places with only a few screen taps
- you can search for a Place by its name
- you can search for a Place by its category

In addition, you can search for special services from the 'Where Am I?' screen.

3.1.2.1 Selecting the destination from the Places of Interest with Quick search

The Quick search feature lets you quickly find the most frequently selected types of Places.

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
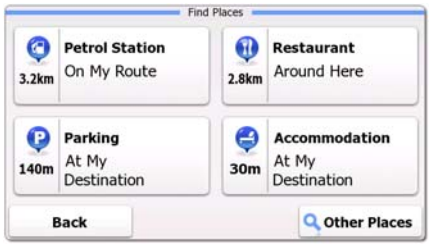

3. The Quick search categories appear:
   -

:
     - If an active route exists, petrol stations are searched along the route.
     - If there is no active route (destination is not selected), they are searched around the current position.
     - If the current position is not available either (no GPS signal), they are searched around the last known position.
   -

:
     - If an active route exists, restaurants are searched along the route.
     - If there is no active route (destination is not selected), they are searched around the current position.
     - If the current position is not available either (no GPS signal), they are searched around the last known position.
   -

:
     - If an active route exists, parking lots are searched around the destination of the route.
     - If there is no active route (destination is not selected), they are searched around the current position.
     - If the current position is not available either (no GPS signal), they are searched around the last known position.

-

:
  - If an active route exists, accommodation is searched around the destination of the route.
  - If there is no active route (destination is not selected), they are searched around the current position.
  - If the current position is not available either (no GPS signal), they are searched around the last known position.

4. Tap any of the quick search buttons to get an instant list of Places.

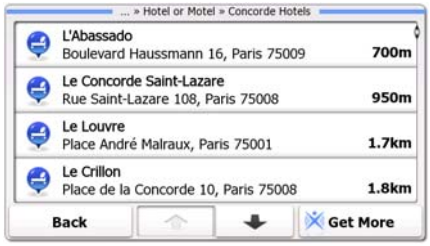

5. The Places in the list are ordered by their distance from the current position, from the destination or by the length of the necessary detour. Normal Places are displayed with their blue category icon only ( ), while Places with extra details (so called "Rich POIs") are marked with the logo of their data source ( ). Tap any of the list items to see its basic details.

6. (optional) If the selected Place is a Rich POI, you can tap

to display additional information. Then tap 

to return to the basic details.

Notre-Dame de Paris
General
Pictures
Description
It is the famous landmark of Paris and the masterpiece of the Gothic period, object of novels and French history books. Kings and queens were crowned here - Napoleon crowned himself
Opening hours
Mon-Sat: 08:00 - 18:45; Sun: 08:00 - 19:45
Flying buttresses, gargoyles and portals
Back

7. Tap

to select the displayed Place of Interest as the destination of the route.

8. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.2.2 Selecting the destination from other Places of Interest by name

You can search for Places of Interest by their names.

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. The Quick search categories appear. Tap

.
4. Select the area where the Place should be searched for:
   - Tap

to search around the current position or if it is not available, around the last know position. (The result list will be ordered by the distance from this position.)
   - Tap

to search for a place within a selected city or town. (The result list will be ordered by the distance from the centre of the selected city/town.)
   - Tap

to search for a place around the destination of the active route. (The result list will be ordered by the distance from the destination.)
   - Tap

to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming petrol stations or restaurants. (The result list will be ordered by the length of the necessary detour.)

5. (optional) If you have selected In a City, select the city/town, then tap Select.

6. Tap Find by Name.

7. Using the keyboard, start entering the name of the Place.

8. After entering a few letters, tap to open the list of Places with names similar to the entered characters.

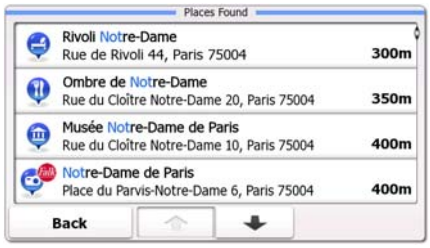

9. The Places in the list are ordered by their distance from the current position, from the destination, from the centre of the selected city/town or by the length of the necessary detour. Normal Places are displayed with their blue category icon only ( ), while Places with extra details (so called "Rich POIs") are marked with the logo of their data source ( ). If needed, tap to browse the list. Tap any of the list items to see its basic details.

10. (optional) If the selected Place is a Rich POI, you can tap **More Details** to display additional information. Then tap **Back** to return to the basic details.

Notre-Dame de Paris
General
Pictures
Description
It is the famous landmark of Paris and the masterpiece of the Gothic period, object of novels and French history books. Kings and queens were crowned here - Napoleon crowned himself
Opening hours
Mon-Sat: 08:00 - 18:45; Sun: 08:00 - 19:45
Flying buttresses, gargoyles and portals
Back

11. Tap **Select** to select the displayed Place of Interest as the destination of the route.
12. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap **More Options** or **Route Settings** to modify route parameters, or tap **Go!** and start your journey.

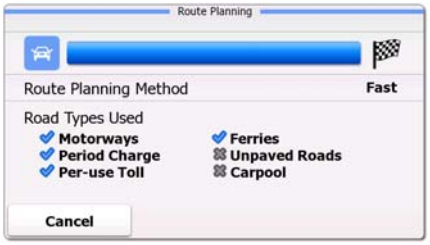

-

3.1.2.3 Selecting the destination from other Places of Interest by category

You can search for Places of Interest by their categories and subcategories.

1. If you are on the Map screen, tap **Menu** to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons: **Destination** , **Find Places** .
3. The Quick search categories appear. Tap **Other Places** .

4. Select the area around which the Place should be searched for:

- Tap [Around Here] to search around the current position or if it is not available, around the last know position. (The result list will be ordered by the distance from this position.)
- Tap [In a City] to search for a place within a selected city or town. (The result list will be ordered by the distance from the centre of the selected city/town.)
- Tap [Around Destination] to search for a place around the destination of the active route. (The result list will be ordered by the distance from the destination.)
- Tap [Along Route] to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming petrol stations or restaurants. (The result list will be ordered by the length of the necessary detour.)

5. (optional) If you have selected [In a City], select the city/town, then tap [Select].

6. Tap [Find by Category].

7. Select one of the main Place categories (e.g. Accommodation) or tap [Show All] to list all Places around the selected location or along the route.

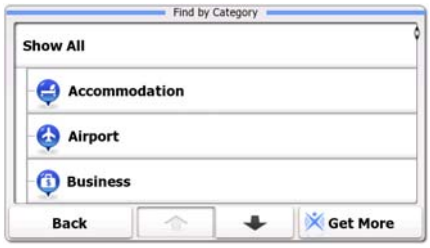

8. Select one of the main Place subcategories (e.g. Hotel or Motel) or tap **Show All** to list all Places in the selected main category around the selected location or along the route.

9. Finally, the results appear in a list.

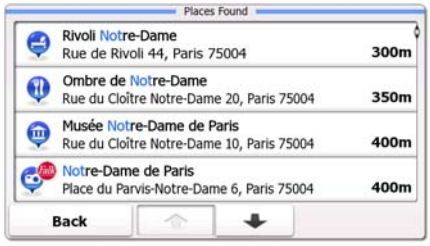

10. The Places in the list are ordered by their distance from the current position, from the destination, from the centre of the selected city/town or by the length of the necessary detour. Normal Places are displayed with their blue category icon only ( ), while Places with extra details (so called "Rich POIs") are marked with the logo of their data source ( ). If needed, tap to browse the list. Tap any of the list items to see its basic details.

11. (optional) If the selected Place is a rich POI, you can tap **More Details** to display additional information. Then tap **Back** to return to the basic details.

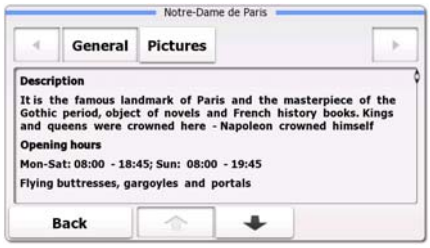
Notre-Dame de Paris
General
Pictures
Description
It is the famous landmark of Paris and the masterpiece of the Gothic period, object of novels and French history books. Kings and queens were crowned here - Napoleon crowned himself
Opening hours
Mon-Sat: 08:00 - 18:45; Sun: 08:00 - 19:45
Flying buttresses, gargoyles and portals
Back

12. Tap Select to select the displayed Place of Interest as the destination of the route.
13. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap More Options or Route Settings to modify route parameters, or tap Go! and start your journey.

-

3.1.2.4 Selecting nearby assistance from 'Where Am I?'

You can quickly search for nearby assistance from the 'Where Am I?' screen.

1. On the Map screen, tap the map anywhere to open the Quick menu.

2. Tap Where Am I?, and then Help Nearby.

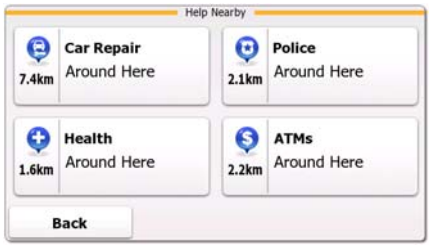

3. The Quick search categories appear, all for searching around the current position (or around the last known position if the current position is not available):
   - Car Repair 7.4km Around Here : Car repair and roadside assistance services

-

: Medical and emergency services
-

: Police stations
- 

: Cash dispensers

4. Tap any of the quick search buttons to get an instant list of that type of Places.

5. The Places in the list are ordered by their distance from the current position, from the destination or by the size of the needed detour. Normal Places are displayed with their blue category icon only ( ), while Places with extra details (so called rich POIs) are marked with the logo of their data source ( ). Tap any of the list items to see its basic details.

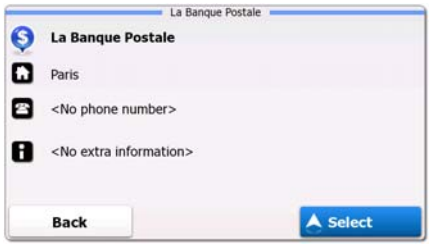

6. (optional) If the selected Place is a 'rich POI', you can tap

to display additional information. Then tap 

to return to the basic details.

Notre-Dame de Paris
General
Pictures
Description
It is the famous landmark of Paris and the masterpiece of the Gothic period, object of novels and French history books. Kings and queens were crowned here - Napoleon crowned himself
Opening hours
Mon-Sat: 08:00 - 18:45; Sun: 08:00 - 19:45
Flying buttresses, gargoyles and portals
Back

7. Tap

to select the displayed Place of Interest as the destination of the route.

8. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.3 Selecting a map location as the destination

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:

,

.
3. Locate your destination on the map: move and scale the map as needed.

4. Tap the location that you want to select as your destination. The Cursor ( ) appears.
5. Tap

to select the Cursor as the destination.
6. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.4 Selecting the destination from your Favourites

You can select a location that you have already saved as a Favourite to be your destination. Adding a location to the list of Favourite destinations is described on page 54.

1. Access the list of Favourites:
   - If you are on the Map screen, tap the map to open the Quick menu.
   - If you are in the Navigation menu, tap

.
2. Tap

. The list of Favourite destinations is displayed.

3. Select the Favourite that you want to set as your destination. If necessary, move between pages with to see more of the list.
4. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.1.5 Selecting the most likely destination (Smart History)

The destinations that you have set earlier appear in the History list. One of those recent destinations is shown in the Destination menu for easy access. Smart History offers this location based upon your navigation habits, using parameters like the current time of day, the day of week, and the current location. The more you use the navigation software, the better it can guess your desired destination.

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap

.

3. Tap the #1 destination in the History field.
4. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap More Options or Route Settings to modify route parameters, or tap Go! and start your journey.

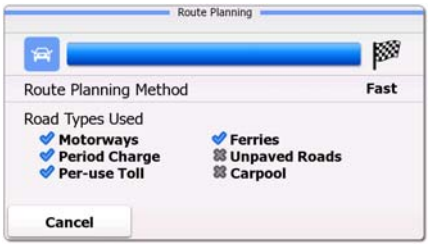

-

3.1.6 Selecting the destination from the History

The destinations that you have set earlier appear in the History.

1. If you are on the Map screen, tap Menu to return to the Navigation menu.
2. In the Navigation menu, tap Destination.

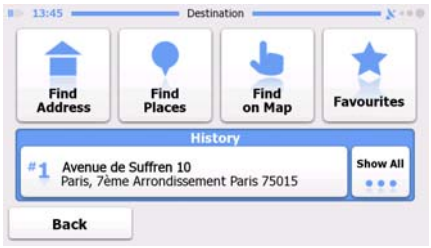

3. Tap Show all.
4. The list of recent destinations appear. Smart History promotes three destinations to the first page based on your previous routes (most likely destinations). The rest of the destinations are ordered by time they were last selected. If necessary, scroll the list to see earlier destinations.

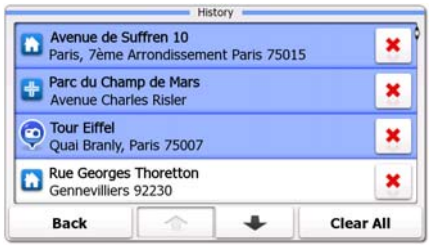

5. Select a destination from the list.
6. After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. Tap

or

to modify route parameters, or tap

and start your journey.

-

3.2 Viewing the entire route on the map

It is easy to get a map overview of the active route. Do as follows:

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap

. The active route is displayed it in its full length on the map together with additional information and controls.

3.3 Checking the route parameters

You can check different parameters of the route recommended by the software.

1. If you are on the Map screen, tap

to return to the Navigation menu.

2. In the Navigation menu, tap

.

The map showing the active route appears in top-down view facing North. Additional information and controls are displayed around the map.

3. The following pieces of information are displayed:
   - The active route is displayed it in its full length on the map.
   - The name or address of the destination is displayed at the top of the screen.
   - You can find route information fields on the right with the following information:
     - Warning icons (if any). They provide extra information about your route (e.g. unpaved roads or toll roads to be taken).
     - The route planning method (e.g. Fast).
     - The symbol of the vehicle type used in route calculation.
     - The total length of the route.
     - The total time of the route.

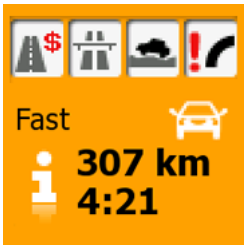

4. You have the following options on this screen:
   - Tap

for route alternatives, to run a simulation of the route, or to add the destination to the list of Favourite destinations.
   - Tap

to change route parameters.
   - Tap

to delete the active route.
   - Tap or to scale the map.
   - Tap

to return to the Navigation menu.

3.4 Modifying the route

When navigation is already started, there are several ways to modify the active route. The following sections show the different options.

3.4.1 Replacing the destination of the route

It is easy to replace the destination of the active route. Select a new destination as described before (starting at page 22), and the route will be automatically recalculated to lead to the new destination.

3.4.2 Setting a new starting position for the route

For normal navigation, all routes are planned from the current position. In order to check future routes, simulate them or see their length in time and distance, you can turn off the GPS receiver. Then you can set the starting point of the route to a different location than the current GPS position.

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap

, and then

.

3. Tap to scroll down and then

.

Set Starting Position
Warning: Manually setting the start position switches off the GPS receiver. To switch on the receiver, go to the Map Screen.
Set Starting Position
Back

4. Tap the large button in the centre of the screen. A screen similar to the address search screen is displayed.

5. Select the address for the starting position, tap

, and then tap 

to confirm.

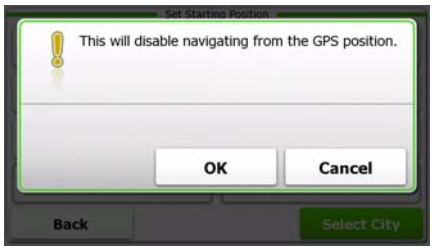

6. The map returns in grayscale (showing that there is no GPS reception). If an active route already existed, it is now recalculated starting from the selected location.

7. (optional) Tap

to modify the route or to check its parameters.
8. To return to normal navigation, tap

.

3.4.3 Pausing the active route

You do not need to pause the active route: when you start driving again, the software restarts the voice instructions from your position.

3.4.4 Deleting the active route

To cancel the navigated route, do as follows:

1. If you are on the Map screen, tap

to return to the Navigation menu.
2. In the Navigation menu, tap

. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap Cancel Route.
4. Tap Yes to confirm.

3.4.5 Changing the route planning method

To recalculate the active route with a different route planning method, do as follows. These changes can also be made in Settings (page 62).

1. If you are on the Map screen, tap Menu to return to the Navigation menu.
2. In the Navigation menu, tap My Route. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap Route Settings.

4. Tap Route Planning Method, and then tap one of the following:
   - Fast - Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
   - Short - Gives a short route. Usually practical for pedestrians, cyclists or slow vehicles.

- Economical - Combines the benefits of Fast and Short: The software calculates as if it were calculating the Fast route, but it takes other roads as well to save fuel.
- Easy - Results in a route with fewer turns and no difficult manoeuvres. With this option, you can make your software to take, for example, the motorway instead of series of smaller roads or streets.

5. The software recalculates the route with the selected route planning method. The orange line line now shows the new recommended route.

3.4.6 Checking the route alternatives

Another way of recalculating the active route with a different route planning method, is to compare these alternatives. Do as follows:

1. If you are on the Map screen, tap Menu to return to the Navigation menu.
2. In the Navigation menu, tap My Route . The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap More Options .

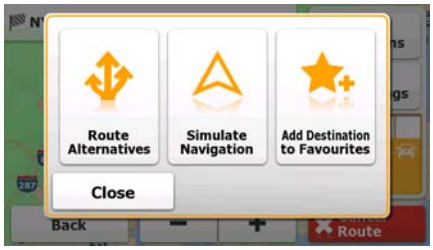

4. Tap Route Alternatives . The map returns with the route fit to screen, and the total route distance together with the estimated duration of the route is displayed for each route planning method. Tap any of the methods, and the orange line line on the map immediately shows the route with the selected route planning method.

- **Fast** - Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
- **Short** - Gives a short route. Usually practical for pedestrians, cyclists or slow vehicles.
- **Economical** - Combines the benefits of Fast and Short: The software calculates as if it were calculating the Fast route, but it takes other roads as well to save fuel.
- **Easy** - Results in a route with fewer turns and no difficult manoeuvres. With this option, you can make your software to take, for example, the motorway instead of series of smaller roads or streets.

5. Tap **Back** to return to the previous screen, and your software recalculates the route with the selected route planning method.

3.4.7 Changing the vehicle used in route planning

To recalculate the active route for a pedestrian or for a different vehicle, do as follows. These changes can also be made in Settings (page 62).

1. If you are on the Map screen, tap **Menu** to return to the Navigation menu.
2. In the Navigation menu, tap **My Route**. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap **Route Settings**.

4. Tap Vehicle, and then tap one of the following:
   - Car
   - Pedestrian
   - Bicycle
   - Emergency
   - , Bus
   - , Taxi
5. The software recalculates the route optimised for the new vehicle type. The orange line now shows the new recommended route.

Note!

If you select Pedestrian and you forget to change it back to a vehicle later, the software warns you when you travel with a speed that is too high for a pedestrian. You are allowed to switch back instantly to Car.

3.4.8 Changing the road types used in route planning

To recalculate the active route with different road type preferences, do as follows. These changes can also be made in Settings (page 62).

1. If you are on the Map screen, tap Menu to return to the Navigation menu.
2. In the Navigation menu, tap My Route. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap Route Settings .

4. Tap any of the listed road types to modify the route. If needed, tap ▼ to list all road types. You have the following options (their order depends on the selected vehicle type):

- Period Charge - Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
- Motorways - You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.
- Unpaved Roads - The software excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.
- Ferries - The software includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
- Per-use Toll - The software includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, your software plans the best toll-free route.

5. Tap Back to confirm the changes. The software recalculates the route. The orange line line now shows the new recommended route.

3.5 Adding the destination of the route to Favourites

You can add the destination of the active route to Favourites, the list of frequently used destinations. Planning a route to one of the Favourite destinations is described on page 43.

1. If you are on the Map screen, tap

to return to the Navigation menu.

2. In the Navigation menu, tap

. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap

.

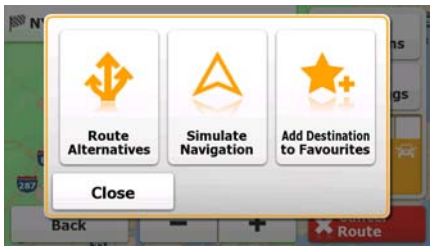

4. Tap
. Using the keyboard, enter a name for the Favourite. Tap

to enter numbers or symbols.

5. Tap

to save the location as a new Favourite destination.

3.6 Watching the simulation of the route

You can run a simulated navigation that demonstrates the active route. Do as follows:

1. If you are on the Map screen, tap

to return to the Navigation menu.

2. In the Navigation menu, tap

. The active route is displayed it in its full length on the map together with additional information and controls.

3. Tap

.

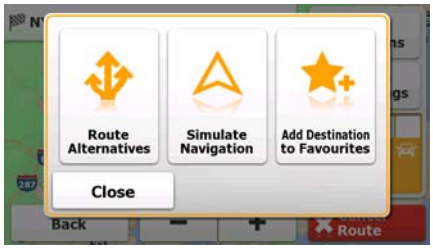

4. Tap

. The simulation starts from the starting point of the route, and using a realistic speed, it leads you through the whole recommended route.

You have the following controls during the simulation (the control buttons disappear after a few seconds but you can open them again if you tap the map):

- : Jump to the next route event (manoeuvre).
- : Pause the simulation.
- : Jump to the previous route event (manoeuvre).

5. Tap

to stop the simulation.

4 Reference Guide

On the following pages you will find the description of the different concepts and menu screens of the software.

4.1 Concepts

4.1.1 Smart Zoom

Smart Zoom provides much more than just a usual automatic zoom feature:

- **While following a route:** when approaching a turn, it will zoom in and raise the view angle to let you easily recognise your manoeuvre at the next junction. If the next turn is at a distance, it will zoom out and lower the view angle to be flat so you can see the road in front of you.
- **While driving without an active route:** Smart Zoom will zoom in if you drive slowly and zoom out when you drive at high speed.

4.1.2 Daytime and night colour themes

The software uses different colour themes during the day and during the night for both the map and the menu screens.

- Daytime colours are similar to paper road maps, and the menus are bright.
- The night colour themes use dark colours for large objects to keep the average brightness of the screen low.

The software offers different daytime and night colour profiles. It can also switch automatically between the daytime and the night schemes based on the current time and GPS position a few minutes before sunrise, when the sky has already turned bright, and a few minutes after sunset, before it becomes dark.

4.1.3 Colour theme in tunnels

When entering a tunnel, the colours of the map change. All buildings disappear, large objects (such as surface waters or forests) and empty areas between roads become black.

However, roads and streets keep their original colours from the daytime or night colour theme currently used.

After leaving the tunnel, the original colours return.

4.1.4 Route calculation and recalculation

your software calculates the route based on your preferences:

- Route planning methods:
  -

  -

  -

  -

- Vehicle types:
  -

  -

  -

  -

  -

  -

- Road types used or avoided in route calculation:
  -

  -

  -

  -

  -

Your software automatically recalculates the route if you deviate from the proposed itinerary.

Depending on the type of the Traffic event, your software also recalculates the route if a Traffic event concerns a part of the recommended route.

For further information about Route settings, see page 62.

4.1.5 Road Safety Cameras

The location of a Road Safety Camera is a special Place of Interest. These cannot be searched like other Places, and there is a special proximity warning only for cameras.

Is the software shipped with a built-in database of Road Safety Cameras?	Yes
Can Road Safety Camera locations be uploaded in a text file?	Yes
Can you save the Cursor as the location of a Road Safety Camera?	No

4.1.5.1 Camera types

There are different types of Road Safety Cameras. For example:

Icon	Type	Description
	Fixed	Some speed cameras stand by the roadside, looking in one direction, measuring one or both directions of the traffic. They measure your current speed. The software warns you when you approach these speed cameras in the measured direction. If your speed exceeds the speed limit near the speed camera, a special warning sound is played.
	Mobile	Some speed cameras are operated from vehicles. They do not always work and they are not set to check a preset speed limit. The warning is similar to fixed speed cameras, but as there is no speed limit given, only the proximity is announced.
	Built-in	Some speed cameras are built into traffic lights. They work like fixed speed cameras, but they are difficult to spot. The warning for proximity and speeding is the same as for the fixed speed cameras.
	Section control	These speed cameras work in pairs, and do not measure your current speed but your average speed between the two speed cameras. Both identify your car and record the exact time you pass them. They use the difference between the two points in time to calculate your average speed. The software warns you when you approach one of these speed cameras, but as you pass by, the warning stays on, and your average speed is measured until you reach another speed camera of this type. If your average speed exceeds the speed limit between the two speed cameras, you receive the same special warning sound as with the other speed camera types. In the rare case your software cannot register the moment you pass the second speed camera (for example, it is placed at the exit of a tunnel where GPS position is not yet available) the warning continues. Just tap the speed camera symbol displayed on the screen to stop the warning. Tap again to display the second route event with the possibility to open the Itinerary.
	Red light	These cameras check if you obey traffic lights. The warning is similar to mobile speed cameras: as there is no speed limit given, only the proximity is announced.

4.1.5.2 Camera directions

A speed camera can measure the speed of one direction of the traffic, both directions, or even several directions in an intersection, when they are mounted on a rotating base. The same directions apply to red light cameras. The software warns you only if you drive in a measured or possibly measured direction.

4.1.6 Speed limit warning

Maps sometimes contain information about the speed limits of the road segments. This information may not be available for your region (ask your local dealer) or may not be fully correct for all roads on the map.

When you exceed the speed limit, a symbol with the speed limit appears in the corner of the map (for example:

).

Furthermore, you can turn on an audible warning: a voice message is played using the selected voice guidance profile when you exceed the speed limit.

4.1.7 Battery and GPS position quality indicators

You can find useful information in the top corners of the high level menu screens (Navigation menu, Destination menu and 'More' menu).

The battery symbol in the top left corner, next to the current time shows information about the rechargeable battery of the device.

Icon	Description
	The battery is charging. The device runs on external power.
	The battery is not charging but it is full.
	The battery is not full but it still has enough capacity.
	You need to recharge the battery.

In the top right corner, the GPS reception quality icon shows the current accuracy of the position information.

Icon	Description
	The software has no connection to the GPS receiver: GPS navigation is not possible. Devices with a built-in GPS receiver are permanently connected. On such devices, the icon does not appear in normal circumstances.
	The software is connected to the GPS receiver, but the signal is too weak and the receiver cannot determine the GPS position. GPS navigation is not possible.
	Only a few satellites are received. Position information is available, but elevation (altitude) cannot be calculated. GPS navigation is possible, but the position error may be significant.
	Altitude information is available, the position is a 3D position. GPS navigation is possible.

4.1.8 Traffic - TMC (Traffic Message Channel)

Your software can provide you with even better routes if Traffic Message Channel (TMC) information is available. TMC is a specific application of the FM Radio Data System (RDS) used for broadcasting real-time traffic and weather information.

Using traffic information is enabled by default in the software.

Note! TMC is not a global service. It may not be available in your country or region. Ask your local dealer for coverage details.

The package of your navigation device contains the TMC receiver that is needed to receive Traffic events. Traffic information is received only if you connect the TMC receiver to your device.

If public Traffic data is broadcast at your location, the software automatically takes into account the traffic events received. You do not need to set anything in the program. The receiver will automatically search the FM radio stations for TMC data, and the decoded information will immediately be used in route planning. The moment your software receives traffic information that may affect your route, the program will warn you that it is recalculating the route, and navigation will continue with a new route that is optimal considering the most up-to-date traffic conditions.

A special icon (TMC) is displayed on the Map screen to show you whether traffic events are received. Road segments affected by traffic events are displayed with an alternate colour on the map, and small symbols above the road show the nature of the event:

To see the list of received Traffic events, tap TMC:

Now tap any of the list items to see its details, and to display the affected road segment in its full length on the map:

You can check or change the currently received FM radio station, or you can instruct the software not to take into account traffic events in route planning (page 64).

4.2 'More' menu

The 'More' menu provides you with various options and additional applications. Tap the following buttons:

,

.

Button	Description
	Access travel applications: the unit converter, the clothing size converter, the list of international phone numbers and a calculator. First, you need to get an activation key for the application kit.
	Read the Tutorial to get instant understanding of the functions of your software, or run the Demo to watch sample route simulations to see how navigation works.
	Get additional content, such as new maps or 3D landmarks; activate or download games and other applications.
	Fine-tune route planning options, change the Vehimarker, turn on or off warnings, start the Configuration wizard, etc. See the next chapter for details.
	If you have not activated your device yet, you can tap this button, tap , then follow the instructions on the screen. See page 68 for details.

4.3 Settings menu

You can configure the program settings, and modify the behaviour of the software. Tap the following buttons:

,

,

.

The Settings menu has several options. Tap or scroll the list with your finger to see the full list.

Button	Description
	These settings determine how routes will be calculated. Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.
	Adjust the sound volume, mute your device or enable warnings.

Button	Description
Traffic	You can select whether to take traffic events into consideration when calculating the route or you can change the radio station.
3D Vehicle Gallery	Replace the current Vehimarker (position arrow) with a vehicle or pedestrian image.
Color Themes	Set daytime and night colour themes for the map and the menus.
Starting Positio	Temporarily turn off the GPS receiver and set a different starting position for your route.
Regional	Change the program language, the voice profile, time format and units or the keyboard language.
Content	List all content items (maps, places of interests, landmarks, etc.) installed on your device. Both the active and the preinstalled inactive content items (activation needed at www.telesystem.it) are listed.
Start Configuration Wizard	Modify the basic software parameters set during the initial setup process. For details, see page 6.
Reset to Defaults	Delete all saved data and reset all settings to their factory defaults.
About	Read the Software and Database End User License Agreement, look up content licenses or check the unique identifier of the software.

4.3.1 Route settings

These settings determine how routes will be calculated.

Button	Description
 Vehicle	You can set the type of vehicle you will use to navigate the route. Based upon this setting, some of the road types can be excluded from the route, or some of the restrictions may not be taken into account in route calculation.
Route Planning Method	The route calculation can be optimised for different situations and vehicle types by changing the planning method. See below for details.
	To let the route fit your needs, you can also set which road types are to be considered for or to be excluded from the route if possible. Excluding a road type is a preference. It does not necessarily mean total prohibition. If your destination can only be accessed using some of the excluded road types, they will be used but only as much as necessary. In this case a warning icon will be shown on the Route Information screen, and the part of the route not matching your preference will be displayed in a different colour on the map.
Motorways	You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

Button	Description
Period Charge	Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
Per-use Toll	The software includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, your software plans the best toll-free route.
Ferries	The software includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
Unpaved Roads	The software excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.

Vehicle types:

- Car
- Pedestrian
- Bicycle
- Emergency
- Bus
- Taxi

Route Planning Method types:

Option	Description
Fast	Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
Short	Gives a route that has the smallest total distance of all possible routes. Usually practical for pedestrians, cyclists or slow vehicles.
Economical	Combines the benefits of Fast and Short: The software calculates as if it were calculating the Fast route, but it takes other roads as well to save fuel.
Easy	Results in a route with fewer turns and no difficult manoeuvres. With this option, you can make your software to take, for example, the motorway instead of series of smaller roads or streets.

4.3.2 Sound settings

You can adjust the sounds of the software and enable some useful warnings.

Button	Description
Master Volume slider	Adjusts the sound volume of the device. All sounds of the application are affected.
	Use the switch to mute all sounds of the device and then to re-enable them again.
	Key sounds provide audible confirmation of tapping the touch screen. The switch turns key sounds on or off.
	Maps may contain information about the speed limits of the road segments. The software is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map. This setting lets you decide whether you wish to receive the audible warning (the visible warning is always on if you exceed the speed limit).
	This feature allows you to receive a warning when approaching a Road Safety Camera. You must ensure on your own liability that using this feature is legal in the country where you intend to use it. You have the following warnings: • Audible Warning: beeps can be played while you are approaching the camera, or just alert sounds if you exceed the speed limit while approaching one of these cameras. • Visible Warning: the type of the camera and the monitored speed limit appear on the Map screen while you are approaching one of these cameras. This button is not displayed when GPS position is not available or if you are in certain countries where Road Safety Camera warning is prohibited. Even if the button is available, you are responsible for checking whether it is legal to use this feature at your location.

You can select whether to take traffic events into consideration when calculating the route or you can change the radio station. Tap the following buttons: ,  , , .

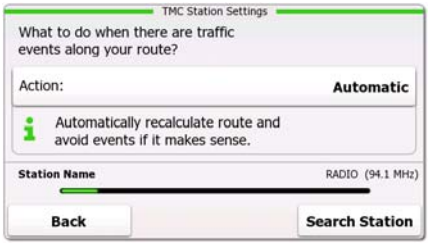

Button	Description
Automatic	This setting determines how your software uses the received Traffic information in route calculation. When calculating a new route, or when recalculation becomes necessary based on the received Traffic events, your software avoids traffic events if it makes sense.
Ignore	Traffic events are not taken into account in route calculation.
Search Station	The currently received radio station and the signal strength is displayed above the button. Tap the button to automatically tune to a different radio station that broadcasts Traffic information.

4.3.3 3D vehicle gallery

The current position is shown by a blue arrow on the map as a default. On this screen, you can select different 3D models to replace the default Vehimarker.

Button	Description
Car	Select a 3D Vehimarker for navigation when the vehicle type used for route planning is set to Car.
Pedestrian	Select a 3D Vehimarker for navigation when the vehicle type used for route planning is set to Pedestrian.
Other Vehicles	Select a 3D Vehimarker for all other vehicle types.

Tip! You can get more Vehimarkers at telesystem.naviextras.com.

4.3.4 Colour themes

You can fine-tune the appearance of the Map screen and the menus. Choose suitable colour themes from the list for both daytime and night use. You can do it separately for the Map screen and all menu screens.

Tap any of the buttons to change the related colour theme, then select the new theme from the list.

4.3.5 Set starting position

For normal navigation, all routes are planned from the current position. In order to check future routes, you can turn off the GPS receiver, and set the starting point of the route to a different location than the current GPS position.

The procedure is explained here: page 47.

4.3.6 Regional settings

These settings allow you to customise the application for your local language, measurement units, time and date settings and formats, as well as to choose the voice guidance profile you prefer.

Button	Description
Program language	This button displays the current written language of the user interface. By tapping the button, you can select a new language from the list of available languages. The application will restart if you change this setting; you are asked to confirm this.
Voice language	This button shows the current voice guidance profile. By tapping the button, you can select a new profile from the list of available languages and speakers. Tap any of these to hear a sample voice prompt. Just tap OK when you have selected the new spoken language.
Time Format and Units	See below.
Keyboard	Select the virtual keyboard to be used when searching for an address or when entering a name to a Favourite destination. Various international keyboard layouts are available.

Time Formats and Units:

Button	Description
Use Auto Time Z	Use this feature to synchronise the time zone of the clock of your device to the time zone based on your current GPS position. This is useful if you travel abroad.
Time Zone	Set time zone manually if you do not want to synchronise the time zone automatically. This allows you to use Auto Time Correction and apply a time zone offset to obtain the desired time.
Time Forma	Select between 12 and 24 hours time display format.
Units	You can set the distance units to be used by the program. your software may not support all the listed units in some voice guidance languages. If you select a measurement unit not supported by the chosen voice guidance language, a warning message will appear.

4.3.7 Content

List all content items (maps, places of interests, landmarks, etc.) installed on your device. The list of the content categories is displayed first.

If needed, browse the list. Tap any of the categories to see its content.

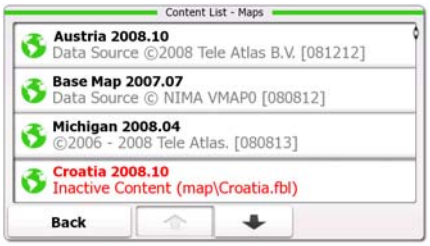

Both the active and the preinstalled inactive content items (activation needed at www.telesystem.it) are listed. Inactive content items are displayed in red. Tap Get Extras naviextras.com in the 'More' menu to buy activation keys for the inactive content.

5 Product activation

To make sure your copy of the navigation software is genuine, you need to activate the product. You are reminded from time to time if you have not done so.

To activate your product, do as follows:

1. Open an Internet browser with a live Internet connection on your computer or mobile phone, and open this site: telesystem.naviextras.com.
2. On your navigation device, enter Product activation in one of the following ways:

   - When reminded to activate, tap the

button.

Activation Reminder
Please activate your product. If you activate your product successfully then you can be 100% sure that your product is genuine.
www.naviextras.com/to/activate
Back
Activate Now

   - Or open the 'More' menu (

,

 ),

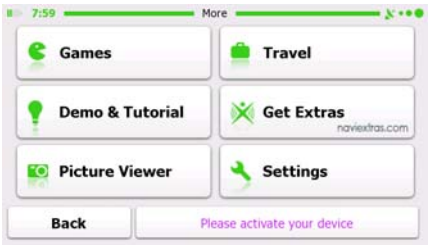

   and then tap Please activate your device .

Activation Reminder
Please activate your product. If you activate your product successfully then you can be 100% sure that your product is genuine.
www.naviextras.com/to/activate
Back
Activate Now

3. Read the description of the Product activation process.

Product Activation
Product activation
In order to activate your navigation product, you need a computer connected to the Internet.
You also need the Product ID of your navigation software. The Product ID is located on a sticker attached to the back of your device. The sticker looks like this:
On your PC, please open a web browser and go to the following address:
Back
Next

   (Should the sticker with the Product ID be missing from your device, scroll down to the end of the description, and tap

. Follow the instructions.)

4. With the Product ID located, tap Next .
5. The Request Code is displayed.

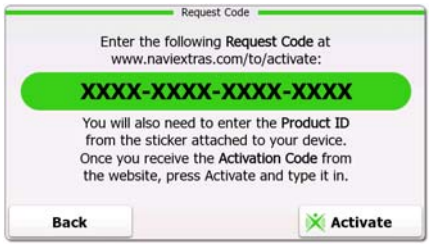
Request Code
Enter the following Request Code at
www.naviextras.com/to/activate:
XXXX-XXXX-XXXX-XXXX
You will also need to enter the Product ID
from the sticker attached to your device.
Once you receive the Activation Code from
the website, press Activate and type it in.
Back
Activate

Enter this code in your Internet browser, and click SUBMIT CODE.

6. Now enter the Product ID from the sticker in your Internet browser, and click GET ACTIVITON CODE.
7. When the Activation Code is displayed in your Internet browser, return to the navigation software, and tap Activate .
8. On the next screen, enter the Activation Code received in your Internet browser. Use the virtual keyboard. The dash characters are automatically placed by the software.

9. When finished, tap Done.

Successful Activation
You have successfully activated the product!
Do you want to restart your device now?
Get Extras! Your device already contains additional
preinstalled content that you can easily activate.
Get Extras
naviextras.com
Restart Later
Restart Now

The activation process is successfully finished. You can restart the navigation software in order not to receive more activation reminders, you can unlock preinstalled contents or get new contents or application with Get Extras naviextras.com , or you can continue using the navigation software and restart it later.

6 Glossary

2D/3D GPS reception

The GPS receiver uses satellite signals to calculate its (your) position and needs at least four signals to give a three-dimensional position, including elevation. Because the satellites are moving and because objects can block the signals, your GPS device might not receive four signals. If three satellites are available, the receiver can calculate the horizontal GPS position but the accuracy is lower and the GPS device does not give you elevation data: only 2D reception is possible.

Active route

The currently navigated route. Whenever the destination is set, the route is active until you delete it, reach your destination or you quit the software. See also: Route.

City Centre

The city/town centre is not the geometric centre of the settlement but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

Colour theme

Your software comes with different colour themes for daytime or night use of the map and menu screens. Themes are custom graphic settings and they can have different colours for streets, blocks or surface waters in 2D and 3D modes, and they display shades or shadows in different ways in 3D mode.

One daytime scheme and one night scheme is always selected for the map and for the menus. The software uses them when it switches from day to night and back.

GPS accuracy

Several factors have impact on the deviation between your real position and the one given by the GPS device. For example, signal delay in the ionosphere or reflecting objects near the GPS device have a different and varying impact on how accurately the GPS device can calculate your position.

Map

The software works with digital maps which are not simply the computerised versions of traditional paper maps. Similarly to the paper road maps, the 2D mode of digital maps show you streets, roads, and elevation is also shown by colours.

In 3D mode, you can see the altitude differences, for example valleys and mountains, elevated roads, and in selected cities 3D landmarks and 3D buildings are also displayed.

You can use digital maps interactively: you can zoom in and out (increase or decrease the scale), you can tilt them up and down, and rotate them left and right. In GPS-supported navigation, digital maps facilitate route planning.

North-up map orientation

In North-up mode the map is rotated so its top always faces North. This is the orientation for example in Find on Map. See also: Track-up map orientation.

Road Safety Camera

A special Place of Interest type for speed cameras and red light cameras. Different data sources are available. You can configure the software to warn you when you approach one of these cameras.

Detecting the location of Road Safety Cameras is prohibited in certain countries. It is the sole responsibility of the driver to check whether this feature can be used during the trip.

Route

A sequence of route events, i.e. manoeuvres (for example, turns and roundabouts) to reach the destination. The route contains one start point and one destination. The start point is the current (or last known) position by default. If you need to see a future route, the start point can be replaced with any other given point.

Track-up map orientation

In Track-up mode the map is rotated so its top always points in the current driving direction. This is the default orientation in 3D map view mode. See also: North-up map orientation.

Vehimarker

The current position is shown with a blue arrowarrow on the map by default. The direction of the blue arrow shows the current heading. This position marker can be replaced with different vehicle and pedestrian symbols. You can even specify different Vehimarkers for different route types (depending on which vehicle type is selected for route calculation).

7 End User Licence Agreement

1. The contracting parties

1.1. Contracting parties to present Agreement are, on the one hand:

TELE System (via S. Benedetto 14/M, 36050, Bressanvido, VI – ITALY, P.I 03339050241) as Licensor

and

the legal user (as defined in Section 2) of the object of present Agreement according to Section 4, hereinafter referred to as User on the other hand (hereinafter jointly referred to as Parties).

2. Conclusion of the Agreement

2.1. The Parties hereby acknowledge that present Agreement shall be concluded by implicit conduct of the Parties, without a signature of the Parties.

2.2. The User hereby acknowledges that following the lawful acquisition of the software product constituting the object of present Agreement (Section 4), any degree of use, installation to a computer or other hardware, installation of such hardware into a vehicle, pressing of the „Accept" button displayed by the software during installation or use (hereinafter referred to as actions of use) shall be deemed as implicit conduct resulting in the conclusion of the Agreement between the User and the Licensor.

2.3. Present Agreement shall by no means entitle persons who unlawfully acquire, use, install on a computer, install in a vehicle or utilise in any manner whatsoever the software product.

2.4. The end user licence agreement between the Parties shall be concluded with terms set forth in present Agreement.

2.5. The time of conclusion of present Agreement is the time of executing the first action of use (commencement of use).

3. Applicable law

3.1. In issues not regulated by present Agreement the jurisdiction of the Republic of Italy.

3.2. Present agreement is issued in English and Italian.

4. The object of the Agreement

4.1. The object of present Agreement shall be the navigation guidance software product of Licensor (hereinafter referred to as software product).

4.2. The software product shall include the operating computer program, its complete documentation, and the map database belonging thereto.

4.3. Any form of display, storage, coding, including printed, electronic or graphic display, storage, source or object code of the software product, or any other as yet indefinable form of display, storage, or coding, or any medium thereof shall be deemed as part of the software product.

4.4. Error corrections, additions, updates used by the User as defined in Section 2 following the conclusion of present contract shall also be deemed as part of the software product.

5. Owner of copyrights

5.1. The Licensor - unless contractual or legal regulations state otherwise - is the exclusive owner of all material copyrights vested in the software product.

5.2. Copyrights extend to the whole software product and its parts separately as well.

5.3. The owner(s) of the copyrights of the map database forming part of the software product is (are) natural person(s) or corporate entity(es) as listed in the appendix to present Agreement or in the „About/Map" menu item of the operating computer program (hereinafter referred to as Database Owner). Licensor hereby states that Licensor has obtained sufficient usage and representation rights from the Database Owner in order to utilise and give into further utilisation the map database as set forth in present Agreement.

5.4. In conclusion and execution of present Agreement the Database Owner is represented by Licensor in relations to the User.

5.5. By concluding present Agreement, Licensor shall withhold all rights vested in the software product, except for those that the User is entitled to according to explicit legal regulations or that of present Agreement.

6. Rights of the User

6.1. The User is entitled to install the software product on one hardware device (desktop, handheld, portable computer, navigation device) at a time, and to run and use one copy thereof.

6.2. The User is entitled to make one security copy of the software product. However, if the software product is operational after installation without the use of the original media copy, then the original media copy is deemed to be a security copy. In all other cases, the User is only entitled to use the security copy if the original media copy of the software product has become unsuitable for proper and legal use without any doubt, such state thereof being supported by acceptable proof.

7. Limitations of use

7.1. The User is not entitled

7.1.1. to multiply the software product (to make a copy thereof);

7.1.2. to lease, rent, lend, distribute, transfer it to a third person with or without a consideration;

7.1.3. to translate the software product (including translation (compilation) to other programming languages);

7.1.4. to decompile the software product;

7.1.5. to modify, extend, transform the software product (in whole or in part), to separate it into parts, compose it with other products, install it in other products, utilise it in other products, not even with the aim of achieving a co-operation with other products;

7.1.6. apart from using the computer program, to obtain information from the map database included in the software product, to decompile the map database, to use, copy, modify, extend, transform the map database in whole or in part or the group of data stored therein, or to install it in other products, utilise it in other products, not even with the aim of achieving a co-operation with other products;

8. Non-warranty, limitation of responsibility

8.1. Licensor hereby informs the User that although the greatest care was taken in producing the software product, yet with respect to the essence of the software product and the technical limitations, the Licensor does not warrant for the software product being completely error free, and the Licensor is not bound by any contractual obligation by which the software product obtained by the User should be completely error free.

8.2. The Licensor does not warrant that the software product is suitable for any purpose defined either by the Licensor or the User, and does not warrant that the software product is capable of co-operating with any other system, device or product (e.g. software or hardware).

8.3. The Licensor does not assume any responsibility for damages incurred due to an error in the software product (including errors of the computer program, the documentation and the map database).

8.4. The Licensor does not assume any responsibility for damages incurred due to the software product not being applicable for any defined purpose, or the error or lack of co-operation thereof with any other system, device or product (e.g. software or hardware).

8.5. The Licensor shall hereby also draw the attention of the User with great emphasis to the fact that while utilising the software product in any form of transportation, observing the traffic regulations and rules (e.g. use of obligatory and/or reasonable and suitable security measures, proper and generally expected care and attention in the given situation, and special care and attention required due to utilising the software product) is the exclusive

responsibility of the User; the Licensor shall not assume any responsibility for any damages occurred in relation to utilising the software product during transportation.

8.6. By concluding present Agreement the User shall especially acknowledge the information stated in Section 8 above.

9. Sanctions

9.1. The Licensor hereby informs the User that according to regulations of the CA, should the Licensor find its rights to be breached, the Licensor may

9.1.1. claim the acknowledgement of such breach by court;

9.1.2. claim ceasing the breach and ordering the person under breach from continuing such;

9.1.3. claim that the person under breach give proper compensation (even by way of publicity, to the expense of the person under breach);

9.1.4. claim the return of the increase of assets due to the breach;

9.1.5. claim ceasing the breaching situation, the restitution of the state before the breach, to the expense of the person in breach, and may claim the destruction of instruments and materials used for the breach, and that of the objects created by the breach;

9.1.6. claim damages.

9.2. The Licensor hereby also informs the User that the breach of copyrights and related rights is a crime according to Italian criminal code and relevant sanctions.

9.3. For disputes arising from present Agreement the parties hereby agree on the exclusive competence of Court of Vicenza, Italy.

8 Copyright note

The product and the information contained herein is subject to change without prior notification.

This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of TELESystem.

© 2009 - TELESystem

Data Source © 2006 Tele Atlas N.V.

Austria:	© BEV, GZ 1368/2003
Denmark:	© DAV
France:	© IGN France
Great Britain:	Ordnance Survey data with permission of Her Majesty's Stationery Office © Crown Copyright
Italy:	© Geonext/DeAgostini
Northern Ireland:	© Ordnance Survey of Northern Ireland
Norway:	© Norwegian Mapping Authority, Public Roads Administration / Mapsolutions
Switzerland:	© Swisstopo
The Netherlands:	Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldorn

All rights reserved.